

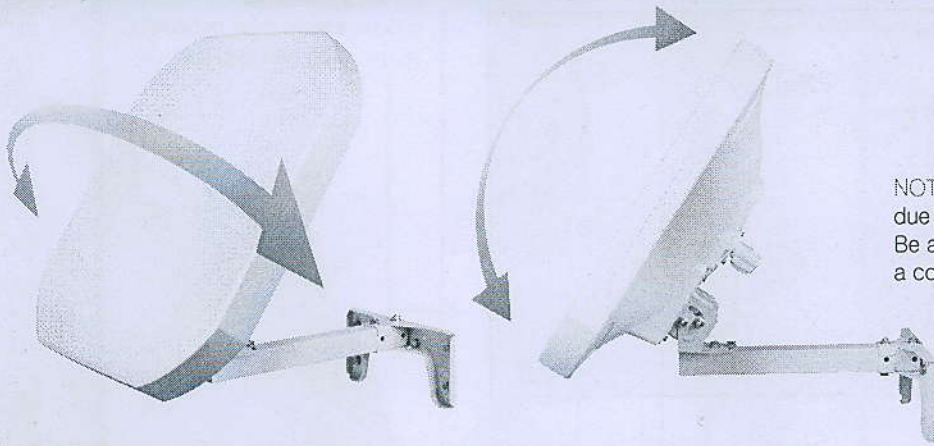


# Assembly Manual

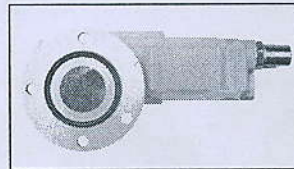


NOTE The flat antenna has lower elevation due to the design of the antenna...  
Be aware that the elevation is different than a conventional dish.



## 1 LNB Mounting on Antenna

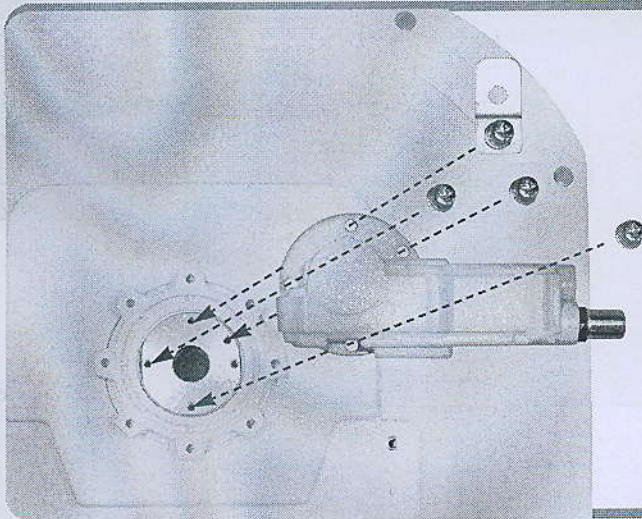

Make sure that black O-ring is placed exactly in circular groove.

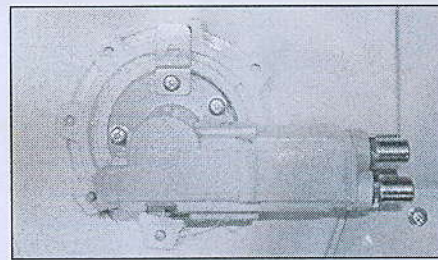


## 2 AZ/EL Bracket Mounting

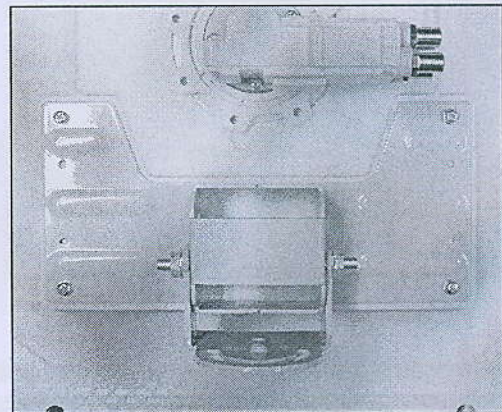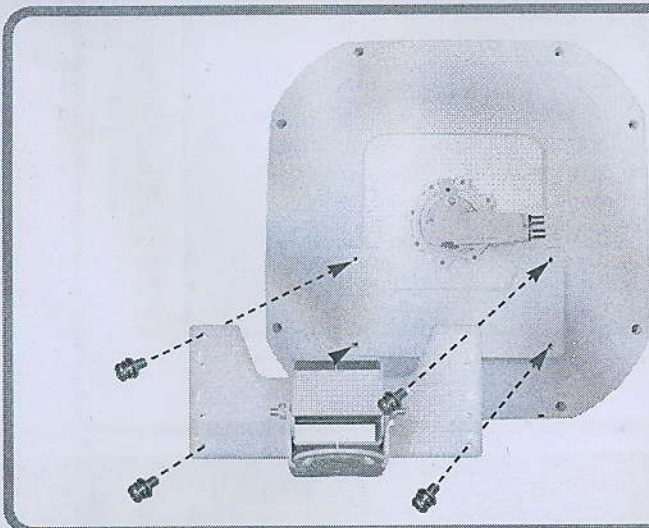




### 3 Pole Mast Assembly

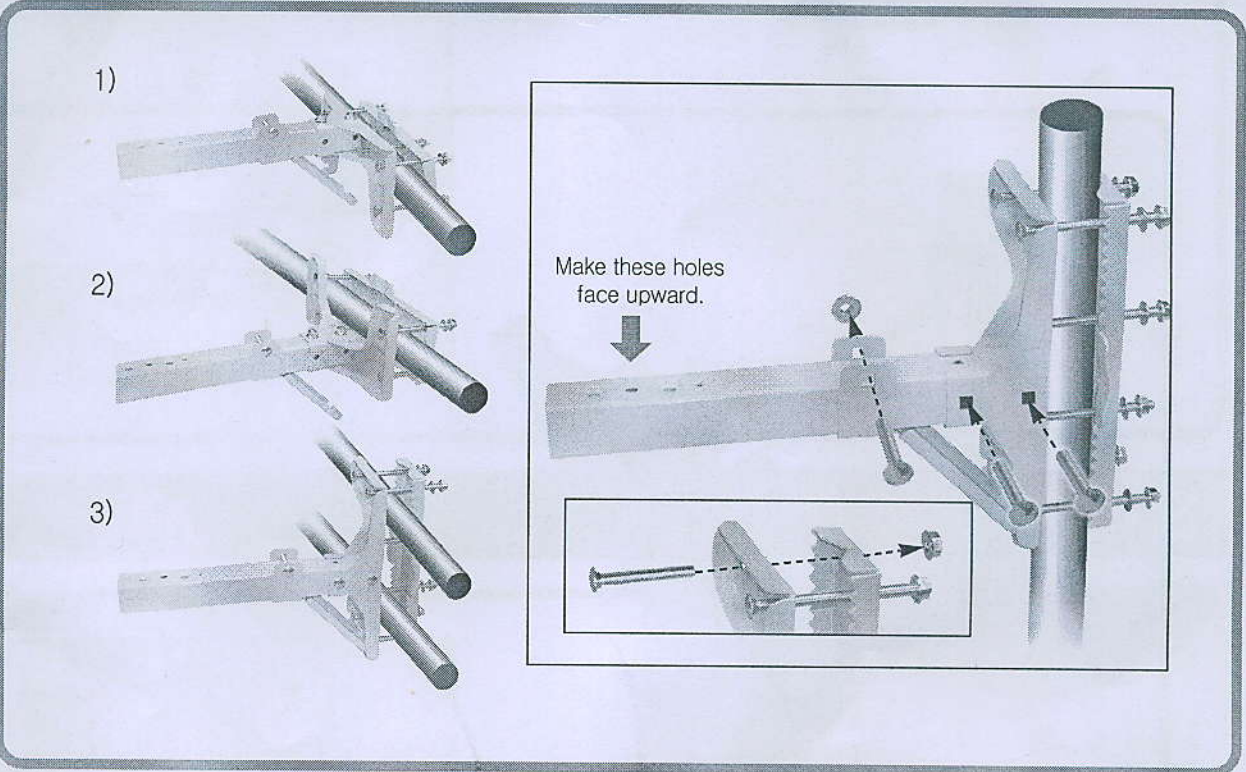


### 4 Antenna Mounting on Pole Mast

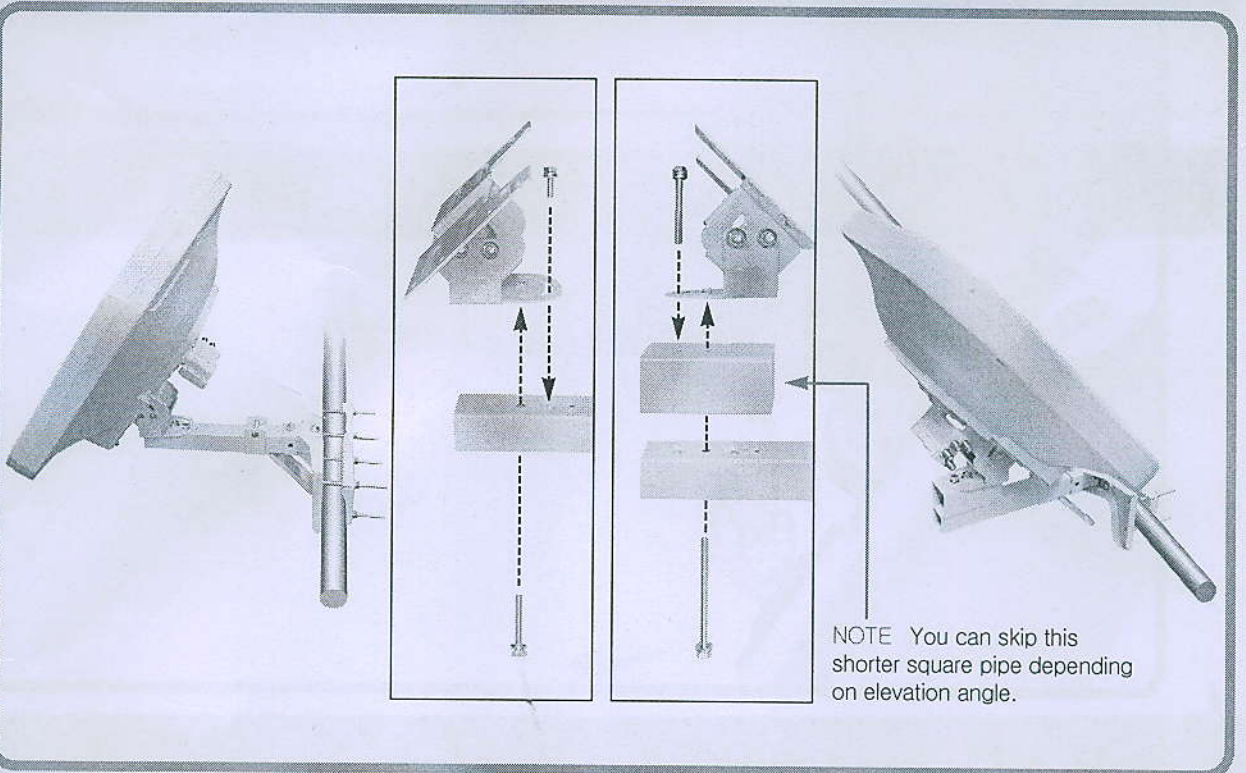





## 5 Polarization Adjustment

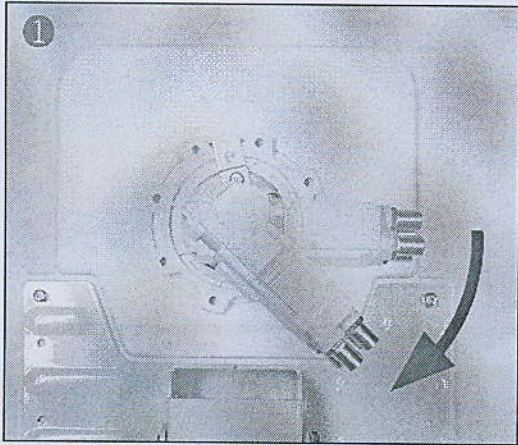


Turn LNB clockwise to loosen the assembly.

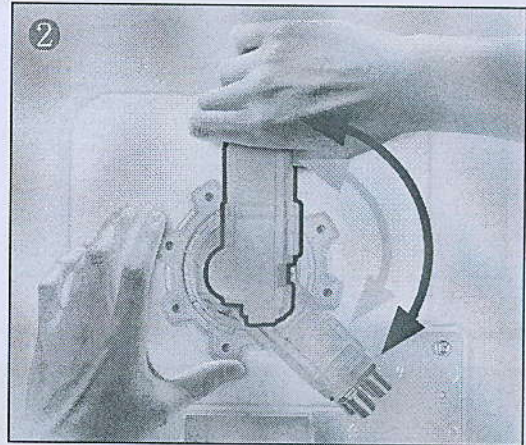


Maximize the signal level by simultaneously rotating red and yellow assemblies.

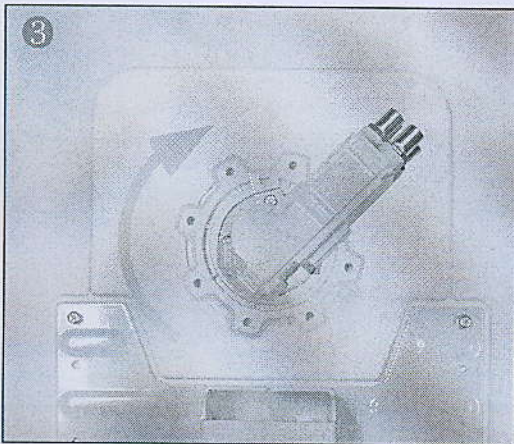

Rotate only yellow assembly clockwise to tighten while holding LNB.

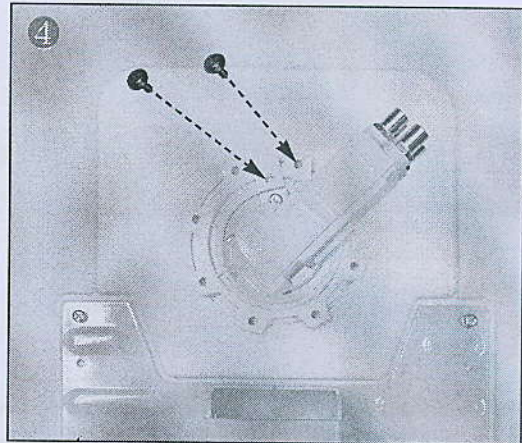


Tap the two coarse screws to fix the positioning.

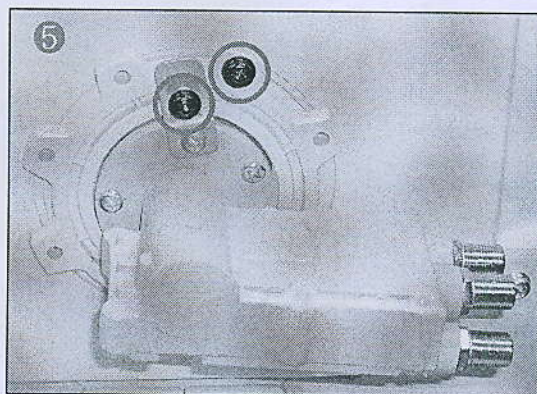



## 6 Standing on Table

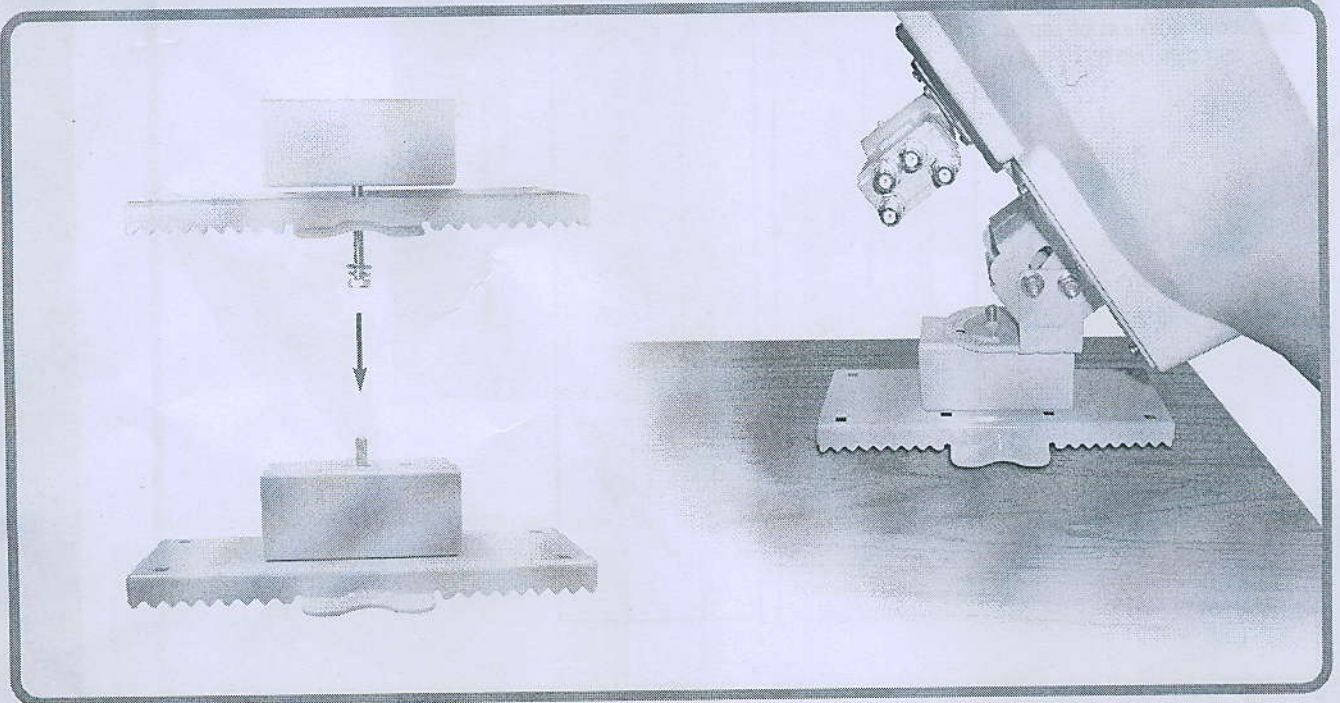

## 7 Installation on Window Frame

